



QCG AND SRG GUN PROBLEMS AND SOLUTIONS

- P.** Gun is leaking from the tip, around the junction of the nosepiece and the body of the gun.
- S.** Remove nosepiece-adapter and inspect the shutoff valve and the valve seat (gasket). Clean the tip of the shutoff valve, and turn over the valve seat (gasket).

If leaking continues, replace the valve seat (gasket).

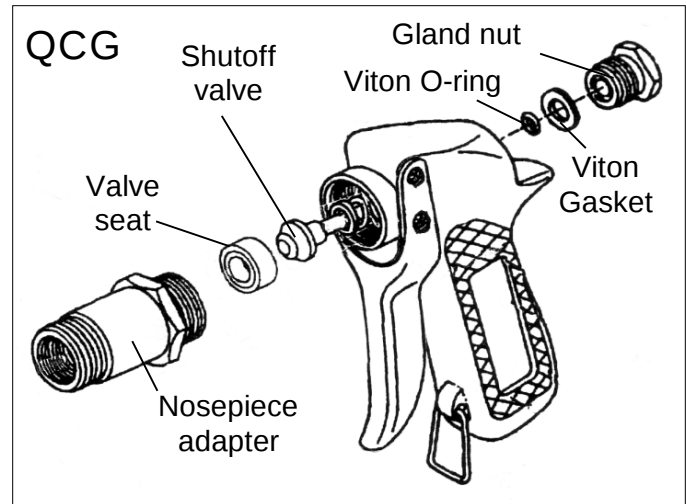

- P.** Leaking occurs at the back of the gun around the large brass nut.
- S.** Tighten the gland nut at the back of the gun. If leaking continues at this site, disassemble the gun and replace the gasket and O-ring associated with the gland nut.

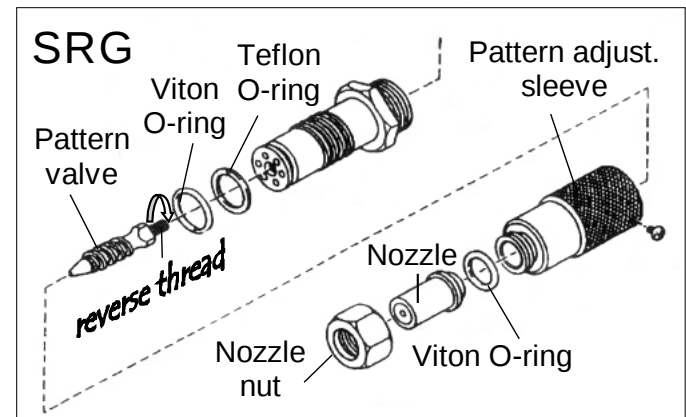



- P.** Leaking occurs around the pattern adjust. sleeve of SRG gun.
- S.** Remove the nozzle nut and inspect the O-ring, remove dirt from around the nozzle.
- Remove pattern adjustment sleeve and inspect Viton and Teflon O-rings. Replace if damaged or worn.

Note: Pattern valve has reversed thread to open.

QCG REPACKING KIT – 34601-V:

- 1 Valve seat
- 1 Viton gasket
- 1 Viton O-ring

2600 Flex-a-Lite

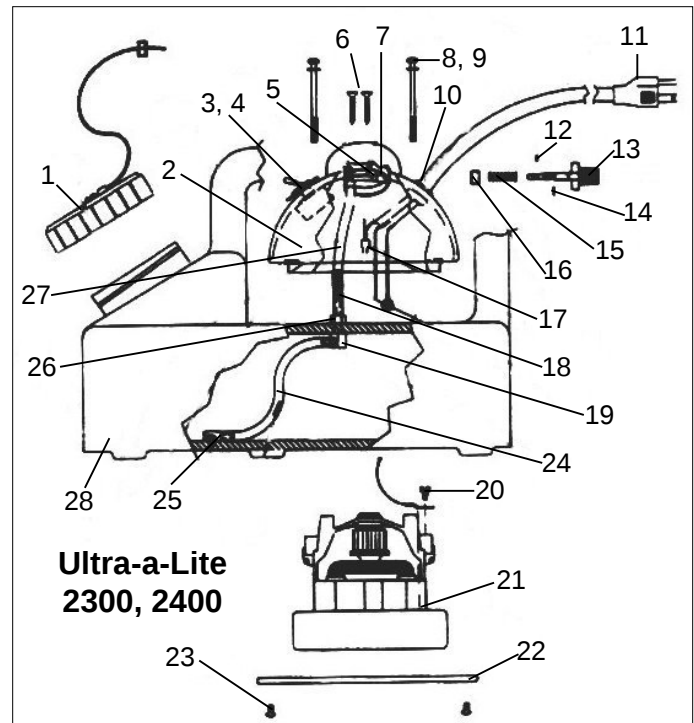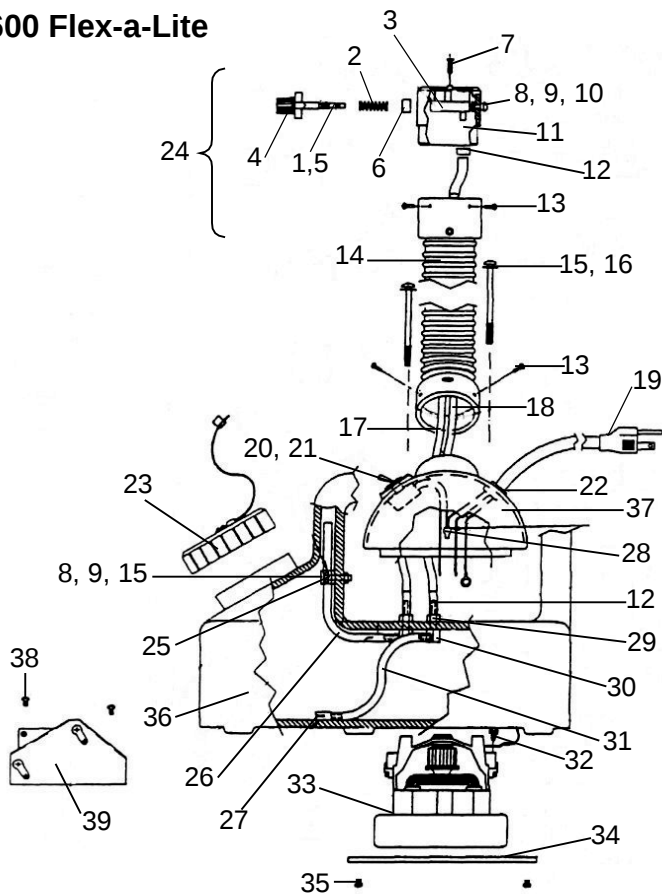

**Ultra-a-Lite
2300, 2400**

2600 Flex-a-Lite Fogger

#	Part	Description	#	Part	Description
1	2332	Clip	20	2311	Switch
2	2334	Spring	21	990	Switch boot
3	2346	Venturi	22	2315	Strain relief
4	2331	Knob assembly	23	2386	Cap and O-ring
5	2330	O-Ring	24	2384	Nozzle assembly
6	2333	Sleeve	25	2358	Tube retainer
7	2329	Screw	26	2319	Pressure tube
8	2352	Screw	27	2312	Strainer
9	2357	Hex nut	28	2316	Wire connector
10	2359	Spacer	29	1241	Tank barb
11	2353	Nozzle	30	1246	Angle barb
12	1433	Spring clamp	31	2375	Supply tube
13	2354	Screw	32	2327	Ground screw
14	2385	Hose assembly	33	2323	Motor 110V
15	2326	Flat washer		2324	Motor 220V
16	2306	Screw	34	2305	Motor guard
17	2349	Pressure tube	35	2306	Screw
18	2374	Supply tube	36	2406	Tank
19	2314	Electric cord	37	2408	Housing
			38	1145	Screw
			39	2355	Mount plate

Ultra-Lite 2300, 2400 Fogger

#	Part	Description
1	2386	Cap and O-Ring
2	2407	Housing
3	990	Switch boot
4	2311	Switch 110V
	2340	Switch 220V
5	2336	Ring
6	2329	Screw
7	2346	Venturi
8	2326	Flat washer
9	2308	Screw 12-24 x 3 1/4
10	2315	Strain relief
11	2314	Electric cord 110V
	2341	Electric cord 220V
12	2330	O-ring (Model 2400)
12	2337	Plug (Model 2300)
13	2331	Valve rod, knob (Model 2400)
14	2332	Clip (Model 2400)
15	2334	Spring (Model 2400)
16	2333	Sleeve (Model 2400)
17	2316	Wire connector
18	2418	Spring
19	1246	Angle barb
20	2327	Grounding screw
21	2323	Motor 110V
	2324	Motor 220V
22	2305	Motor guard
23	2306	Screw
24	2375	Supply tube, lower
25	2312	Strainer
26	1241	Tank barb
27	2401	Supply tube, upper
28	2404	Tank