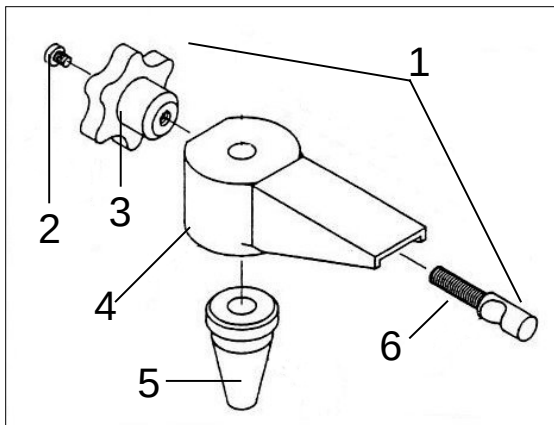
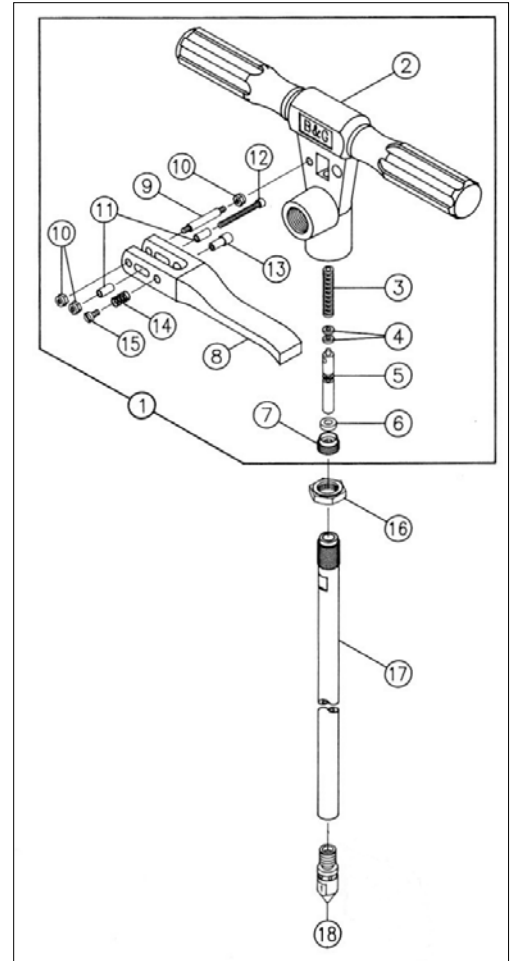


484 / 486 Versatool

#	Part	Order #	Description
1	1549	22071649	Valve assembly
2	1544	22071644	Valve body
3	VT-618	22059700	Rod spring
4	1-1964	33000090	O-Ring
5	VT-619	22059800	Valve rod
6	VT-621A	22060000	Seat gasket
7	VT-622A	22060100	Seat gasket holder
8	VT-611	22059000	Valve trigger
9	VT-609	22058800	Trigger pin
10	TN-45	22040500	Hex nut
11	1138	22071038	Spacer
12	VT-612	22059100	Rod screw
13	VT-615	22059400	Trigger lock
14	VT-616	22059500	Trigger lock spring
15	VT-617	22059600	Trigger lock screw
16	-----	22071783	Seal nut
17	1393	22071393	Slab pipe 7/16" x 40"
18	1390	22071390	Tip, 360°, 2 gpm

**Adjustable Cone Seal**

#	Part	Order #	Description
1		22071716	Adj. Cone Seal 7/16"
2	1145	22071045	Retaining screw
3	1380	22071380	Lock knob
4	ACS-30	22071776	Foot ram
5	ACS-26	22071715	Cone seal 7/16"
6	1381	22071381	Lock bolt