


Suggested Baits	
Animal	Bait
Chipmunk	Peanut butter, cereal, grains
Groundhog	Apple slice
Rabbit	Fresh vegetables
Raccoon	Sugar covered vegetables
Skunk	Crisp bacon, fish (canned or fresh)
Squirrel	Seeds, peanuts, apple slice
Stray cat	Cat food, sardines, meat

Carnadas Sugeridas	
Animal	Carnada
Ardilla Listada	Mantequilla de maní, cereal, granos
Marmota Americana	Rebanadas de Manzana
Conejos	Verduras Frescas
Mapache	Verduras Cubiertas con azúcar
Zorillo	Tocino durado, pescado (de lata o fresco)
Ardilla	Semillas, cacahuates, rebanadas de manzana
Gatos Callejeros	Comida de gatos, sardinas, carne

Appâts recommandés	
Animal	Appât
Chat errant	Nourriture pour chats, sardines, viande
Écureuil	Graines, arachides, tranches de pommes
Lapin	Légumes frais
Marmotte	Tranches de pommes
Mouffette	Bacon croquant, poisson (en boîte ou frais)
Raton-laveur	Légumes couverts de sucre
Tamias rayé	Beurre d'arachide, céréales, grains

### Baiting Model # 1081

1. Lift door lock on top of the trap. As you push the outer door against the inner door, release the door lock. Lift both doors together. (*Illustration #1*)
2. Place bait approximately two inches from the back of the trap. If you have difficulty reaching the back of the trap, place trap on its end and drop bait into it. **Do not place bait on the trigger pan.** Always bait the trap before setting it.

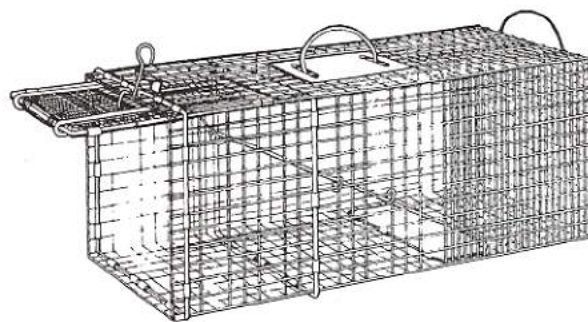

Model 1081

### Setting Model 1081

1. Lift the door lock with one hand.
2. (*Illustration #2*) Push and hold the doors open with the other hand.
3. Release the door lock
4. (*Illustration #3*) With free hand, reach inside trap and pull the trigger rod forward until the hook engages the wire of the door. Hold trigger rod in place until after you release the door.
5. In the set position, the back of the pan should not be higher than one inch off the bottom of the trap. Adjust this level by bending the trigger hook forward or back.

**Tips:** For a smaller animals, use a light trigger release setting. Place just tip of the trigger rod under the door cross rod. (*Illustration #4*)

For larger animals, use a heavier trigger release setting. Push the end of the trigger rod completely under the door cross rod. (*Illustration #5*)

**Note:** If you have difficulty setting your Havahart cage trap, the Trigger Rod may be hung up on the trap door. To correct this problem, simply pull the long trigger rod forward until the circular portion of the Trigger Rod clears the door. Then set the trap as instructed.

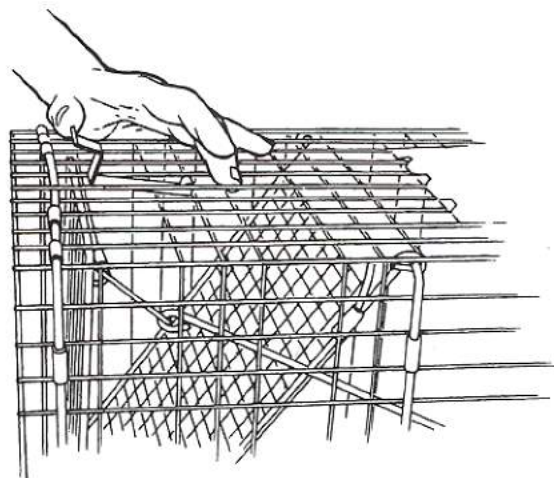


Illustration #1

### Disposing of Captured Animals

**Note:** Check with your local or state Game Commission to determine the lawful method of disposing of a captured wild or nuisance animal.

**CAUTION: DO NOT ATTEMPT TO HANDLE CAPTURED ANIMALS. DO NOT LEAVE CHILDREN UNATTENDED NEAR A CAPTURED ANIMAL.**

*To release the animal, approach trap cautiously and quietly so you don't excite the animal.*

1. Lift the door lock.
2. Hold the trap down with your foot to keep it from sliding.
3. (*Illustration #6*) Insert small end of the Trap Release Tool below the center of the outer door. With the Tool, push the outer door against the inner door and clip them together.
4. Release the door lock.
5. Stand behind the trap and roll it upside down with your foot. The doors will fall open and the animal will run out.

#### Domestic Animals:

Place the trap on the ground upside down. Release the door lock and the doors will fall open. The animal will run out.

To lock the trap door in an open position, insert the **Trap Release Tool** and engage both doors. With the Tool, lift the doors flush with the top of the trap and hook the Tool over a trap top wire.

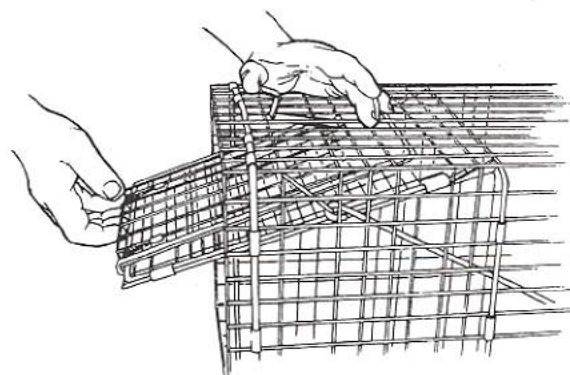


Illustration #2