


MODEL: Gilbert® 711 "Flying Lion"

See Parts List (Page 16) For Part Descriptions

DETAIL A
GROUND TERMINAL: ○
8-32x1/4" RHMS SECURED BY
8-32 HEX NUT

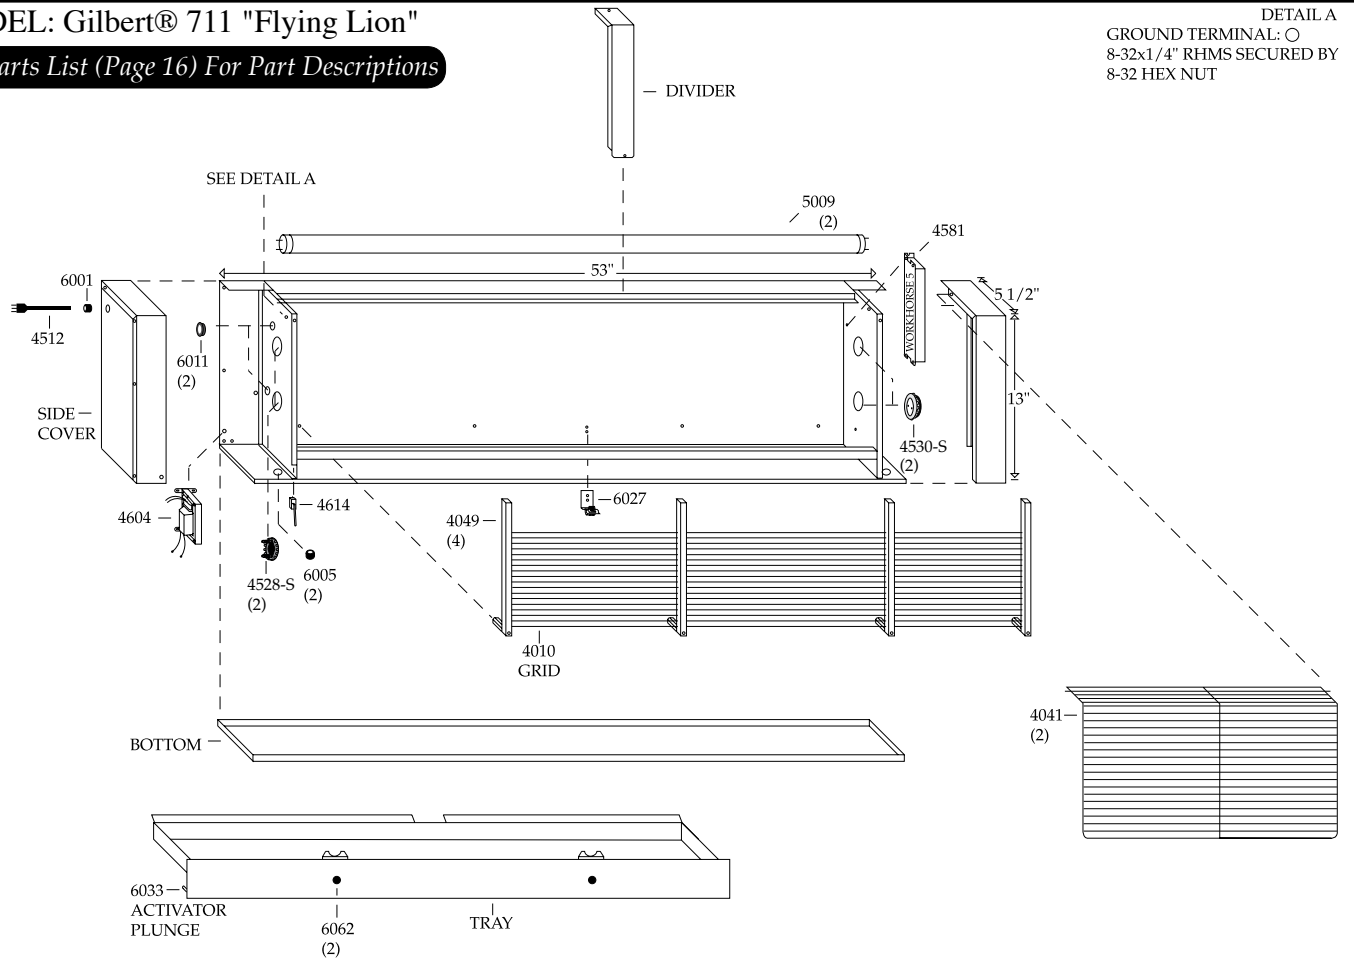

INSTALLATION AND APPLICATION

REMOVE ALL PACKING MATERIALS BEFORE INSTALLATION

PROFESSIONAL ELECTROCUTING LIGHT TRAPS


Model 711 Flying Lion™

INSTALLATION INSTRUCTIONS

1. LAMPS SHOULD BE IN A HORIZONTAL POSITION WHEN UNIT IS PROPERLY INSTALLED.

2. USING A LEVEL AND PENCIL, DRAW A STRAIGHT 33" LINE APPROX. 3' ABOVE FLOOR. COME IN 1/4" FROM ONE END AND MARK ACROSS THAT LINE. MEASURE 32" FROM THAT POINT AND MAKE A SECOND MARK. MOUNT THE TWO SCREWS (PROVIDED) AT THE CROSSPOINTS, LEAVING 1/2" OF THE SCREW STICKING OUT. SLIDE UNIT ONTO MOUNTING SCREWS AND CONNECT TO AC POWER.

NOTE: IF MOUNTING ON MASONRY, USE A 3/16" BIT (NOT PROVIDED) AND DRILL OUT THE TWO CROSS MARKS AND INSERT THE TWO PLASTIC ANCHORS (PROVIDED) BEFORE MOUNTING THE TWO SCREWS.

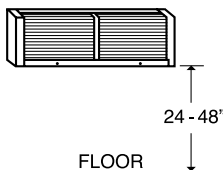

The Flying Lion™ is a superior trap to control flies and other flying insects. Keyhole slots are located on back for wall installation. **Generally speaking, the lower any trap is placed, the more effective it is against flies.** The Flying Lion™ is normally mounted 24" above the floor.

Models 601T Don™, 601E Executive™ & 601TJ Junior™

INSTALLATION INSTRUCTIONS

1. LAMPS SHOULD BE IN A VERTICAL POSITION WHEN UNIT IS PROPERLY INSTALLED.


2. **FOR FLAT-WALL MOUNTING:** USING A LEVEL AND PENCIL, DRAW A STRAIGHT 7" LINE APPROX. 5' ABOVE FLOOR. COME IN 1/4" FROM ONE END AND MARK ACROSS THAT LINE. MEASURE 5 1/4" FROM THAT POINT AND MAKE A SECOND MARK. MOUNT THE TWO SCREWS (PROVIDED) AT THE CROSSPOINTS, LEAVING 1/2" OF THE SCREW STICKING OUT. SLIDE UNIT ONTO MOUNTING SCREWS AND CONNECT TO AC POWER.

3. **FOR CORNER MOUNTING:** USING A LEVEL AND PENCIL, DRAW A STRAIGHT 8 1/2" LINE FROM THE CORNER IN BOTH DIRECTIONS, APPROX. 5' ABOVE FLOOR. MAKE A CROSS MARK AT THE END OF BOTH LINES. MOUNT THE TWO SCREWS (PROVIDED) AT THE CROSSPOINTS, LEAVING 1/2" OF THE SCREW STICKING OUT. SLIDE UNIT ONTO MOUNTING SCREWS AND CONNECT TO AC POWER.

4. AFTER MOUNTING UNIT, OPEN THE GUARD AND PUT THE 2 ADDITIONAL SCREWS (PROVIDED) IN THE 2 SLOTS AT THE BOTTOM.

5. MODELS 601E & 601C (ONLY) MAY BE RECESS MOUNTED IN WALL.

NOTE: IF MOUNTING ON MASONRY, USE A 3/16" BIT (NOT PROVIDED) AND DRILL OUT THE TWO CROSS MARKS AND INSERT THE TWO PLASTIC ANCHORS (PROVIDED) BEFORE MOUNTING THE TWO SCREWS.

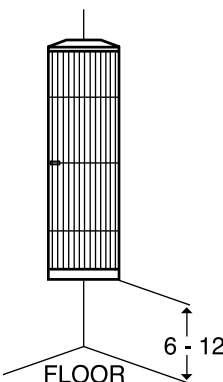

The Don™, Executive™ and Junior™ are for use indoors to control flies and other flying insects. These models have keyhole slots located on the back for wall or corner installation and should be mounted 6" to 12" above floor for best results.

To recess mount the Executive™, remove wing nut at bottom of inner body (which contains all electrical components), pull out bottom of inner body, slide down and out. Mount outer case permanently into wall. Reverse process to insert inner body.