


Supply Duct Kit


Part No. 4033039

Parts Included:

X 2 10" Duct Collar



X 12 #6-20 X 3/4"
Screws

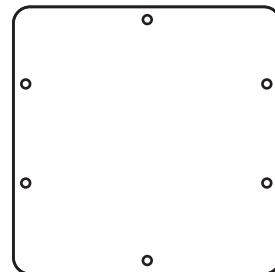


Duct Plate

Tools Required: Phillips Screwdriver



CAUTION! Before installing duct kit, disconnect dehumidifier from electrical power and disconnect duct work if previously installed.

Step 1: Determine which side(s) of the dehumidifier you would like to attach duct collar(s). The duct collar(s) can be attached to one exhaust outlet or both exhaust outlets.

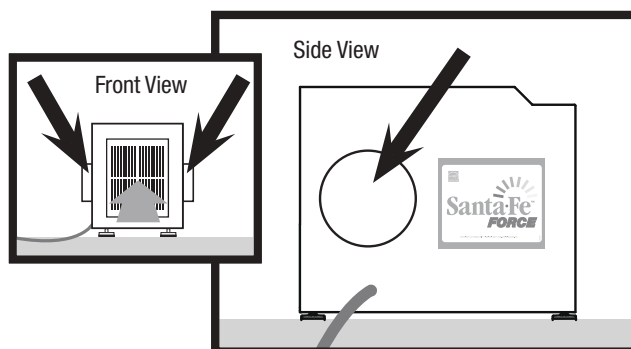

Step 2: Before attaching duct collar to dehumidifier, start 6 screws in to pre-drilled holes in the duct collar.



OVER



Therma-Stor LLC

Driven by performance. Powered by design.™

4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • www.thermastor.com • sales@thermastor.com

TS-777

Step 3: Attach duct collar to side of dehumidifier aligning screws with pre-drilled screw holes. Tighten screws.



Step 4: If attaching duct collar to both exhaust outlets, repeat steps 2-4 for the opposite side. If only using one exhaust outlet, skip step 4 and proceed to step 5.

Step 5: Attach duct plate to side of dehumidifier using 6 screws. This will direct all exhaust air to the side with the duct collar attached. If attaching collars to both exhaust outlets, skip step 5 and proceed to step 6.



Step 6: Attach ducting as needed.



Therma-Stor[®] LLC

Driven by performance. Powered by design.™

4201 Lien Rd Madison, WI 53704 • TOLL-FREE 1-800-533-7533 • www.thermastor.com • sales@thermastor.com

TS-777